



For The ON-THE-GO Pet™

INSTRUCTION MANUAL TRAVEL SYSTEM

Pet Stroller

PG8500



Interior Dimensions:
19L x 11W x 11H

To see our full line of products, visit us online at: www.petgearinc.com

CUSTOMER SERVICE HELP DESK

customerservice@petgearinc.com

Toll-Free 877-752-9123 - Eastern Standard Time 8am-3pm, Monday through Friday

⚠ WARNING!


FOR PETS ONLY.

Not intended to be used as a restraining device for aggressive or dangerous animals that dig, chew or paw aggressively. Do not leave your pet unattended. **PET GEAR** is not liable for any damage caused by aggressive, destructive, immature or untrained animals. Do not use near an open or exposed flame. Failure to follow these warnings and the instructions could result in serious injury or death.


- Do not carry additional bags, goods, or accessories in or on stroller except as recommended in the manufacturer's instructions.
- Recommended use of an approved safety restraint correctly fitted and adjusted.
- Do not leave pet unsupervised in stroller.
- Before making adjustments to stroller ensure that pet's body is clear of any moving parts.
- This stroller is designed for one pet only.
- Do not hang bags from handles as this may cause the product to become unstable.
- Do not use on escalator or stairs; fold stroller and carry.
- Put on brake whenever you park the stroller.
- Ensure stroller is completely erected and check that all locks are engaged before placing pet in stroller.
- Do not overload as stroller may become unstable; maximum weight of pet using this stroller not to exceed 15 lbs.
- Any goods carried in the basket not to exceed 6 lbs.

PARTS LIST

Check that you have all the parts shown BEFORE assembling your product.
If any parts are missing, call Customer Service.

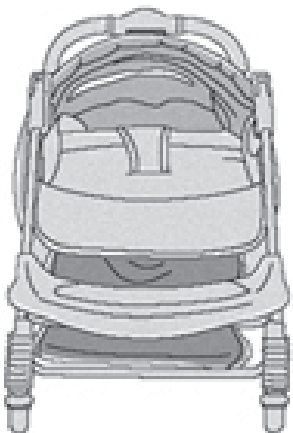

Stroller

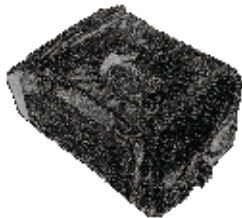

Carrier



Front Wheel Assembly (2)



Back Wheels (2)



Rear Axle Assembly



Washer (2)




Cotter Pin (2)



Hub Cap (2)

TO OPEN STROLLER

Step 1. Release locking latch.

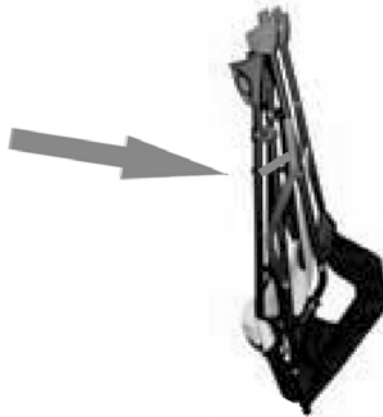

Step 2. Unfold as shown. Make sure both locks snap into place.




TO ASSEMBLE FRONT WHEELS


Step 1. Turn stroller over as shown.

Step 2. Push wheel assembly onto stroller leg until it snaps into place. Tug firmly on wheel assembly to be sure that wheel is securely in place. Repeat for other wheel.

NOTE: To remove, squeeze tab and pull wheel off.

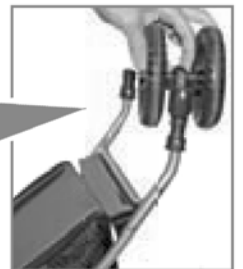

Note Direction of Arrow

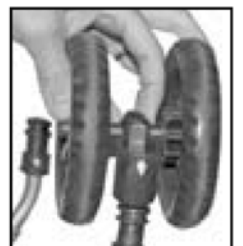

TO ASSEMBLE REAR WHEELS

Step 1. Remove and discard protective sleeve from ends of rear axle assembly and rear leg tubes.

Step 2. Position rear axle assemblies onto rear leg tubes at the same time.

Step 3. Slide wheel onto axle.

Step 4. Slide washer onto axle.

Step 5. Fit straight part of cotter pin through hole on axle.

Step 6. Line up each of the tabs in the hub cap with the slots in the wheel. Snap hub cap into place. Fit cover to collet by firmly pressing the cover into place.

Step 7. Repeat for other side.



TO ATTACH CARRIER TO FRAME

Attach Carrier with Velcro-2 places on each side.



TO USE IN VEHICLE

Place seat belt through strap and adjust seat belt.



TO OPERATE BRAKES

Step 1. Push levers on both rear wheels down to lock.

Step 2. Pull levers up to unlock.



TO FOLD STROLLER

Step 1. Before folding, Lock brakes and close canopy.




Step 2. Standing behind stroller, pull up on both side latches.

Step 3. Fold as shown.

NOTE: Fold stroller so wheels straddle frame. **DO NOT** allow wheels to press against frame as this may damage tires.



Step 4. Engage locking latch.

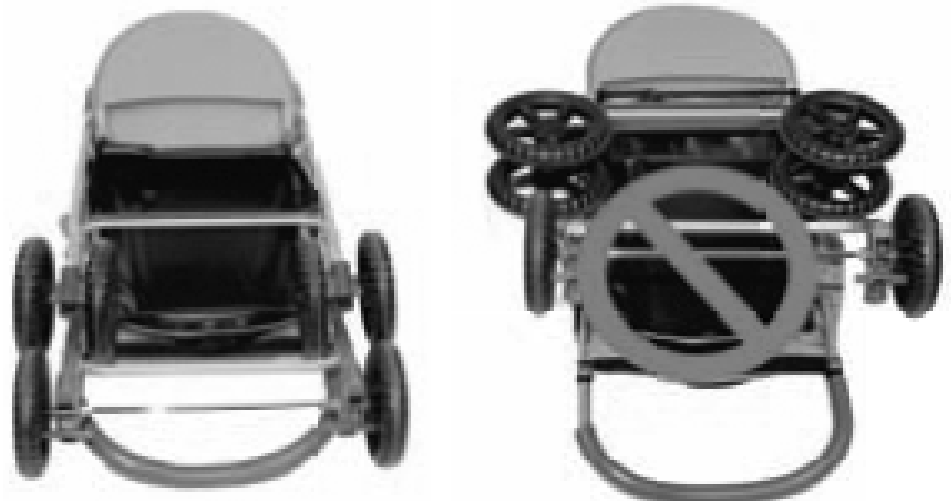

LOOKING AFTER YOUR STROLLER

- Always store product in a clean, dry place.
- Not recommended for use on the beach.
- Do not put heavy items on top of the stroller.
- Clean frame by wiping with a lightly oiled cloth.
- Do not use detergent or abrasives. Spot clean fabric with dry cleaning fluid or mild soap and warm water.
- To ensure easy maneuverability and to minimize wear and tear, (especially wheels, axles, and swivels), keep all moving parts clean and lubricated with WD40® or light machine oil.
- NOTE: Do not lubricate brake components or swivel locks.
- Regularly check stroller for loose parts. These should be tightened or replaced.

WHEEL MAINTENANCE

- To clean and lubricate front and rear wheels, push out locking lever under wheel housing to release rear wheel.
- To ensure ease of maneuverability and to minimize wear and tear, keep all moving parts clean and lubricated with WD40® or light machine oil.
- Push wheel sets back on until they click and lock in position; pull on wheel housings to ensure they are secure.
- Push stroller back and forth and rotate swivels around to work in lubricant.
- Clean the rear wheel assembly and the rest of the frame with warm, soapy water; clean off with warm water and dry thoroughly.
- NOTE: Do not lubricate brake components or swivel locks.

REPLACEMENT PARTS

Please have your model number ready before calling. Use only **PET GEAR** replacement parts.



PO Box 99
West Rutland, VT 05777
877-752-9123
www.petgearinc.com

