

For The ON-THE-GO Pet™

INSTRUCTION MANUAL AT3 NO-ZIP PET STROLLER

PG8350NZ



To see our full line of products, visit us online at: www.petgearinc.com

CUSTOMER SERVICE HELP DESK


customerservice@petgearinc.com

Toll-Free 877-752-9123 - Eastern Standard Time 8am-3pm, Monday through Friday

PARTS LIST


Check that you have all the parts shown BEFORE assembling your product.

If any parts are missing, call Customer Service.

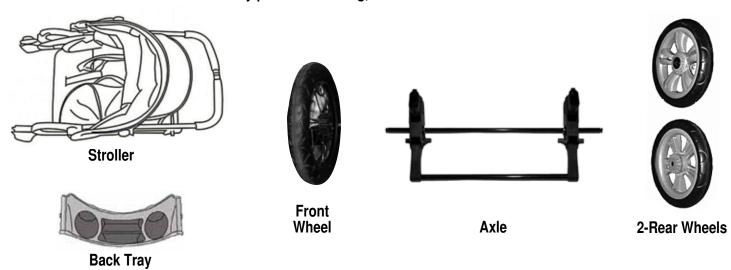

ASSEMBLY INSTRUCTIONS

Step 1. Push back wheels on to axle, as shown in Figure A, until they lock into place.

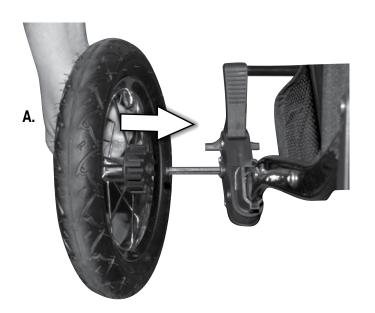

Step 2. Pull on wheel to make sure the wheel is engaged. Repeat on other side. When finished it should look like Figure B.




Back Wheels Inside Outside C. Lock/Release Button


To remove wheel, push the lock/release button (Figure C) and pull wheel off.

Step 3. To attach front wheel, slide plastic wheel support up and onto tubing.


Step 4. Slide wheel up, until velco pins pop out of holes.

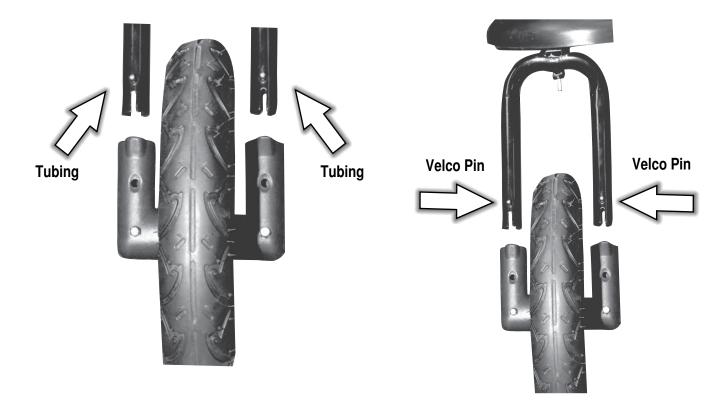

Step 5. To use stroller in locked position for jogging, move pin so that it is at the top of the "L" shaped cutout.

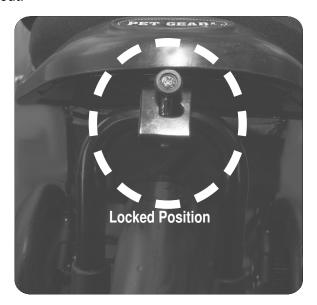

Step 6. To use stroller in swivel position, pull pin down, and to the right.

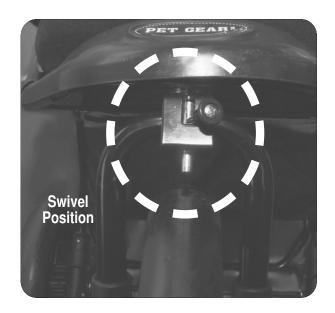


UNFOLDING THE STROLLER

Step 1. Release folding latch (D).

Step 2. Spread handle (E) and seat apart until the frame clicks and locks on both sides.

Step 3. Ensure that the stroller is locked in on both sides before using.

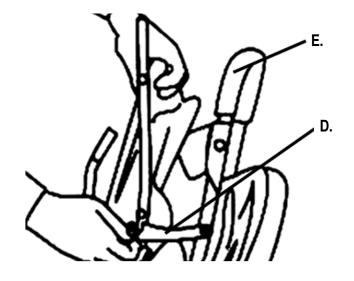

TO SECURE COMPARTMENT TO FRAME

Step 1. Open stroller and pull compartment down.

Step 2. Clip onto frame.





TO SECURE SIDE FLAP


To help secure compartment, Velcro flap around tube and fasten to the bottom of the compartment.





TO ASSEMBLE BACK TRAY

Step 1. To assemble the back tray, first align two holes on the side of the tray with the two rivets.

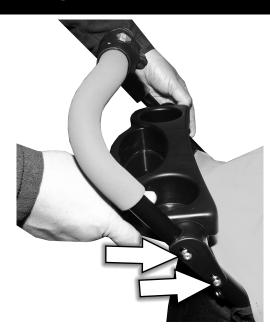

Step 2. Align the other side of the tray with the single rivet on that side.




Step 3. Push down on the tray to lock it into place.



TO SECURE LATCH

Step 1. To close compartment, pull downward and clip the canopy into the front of the stroller until it locks.

Step 2. To open the stroller canopy, simply push and release button to unlock.

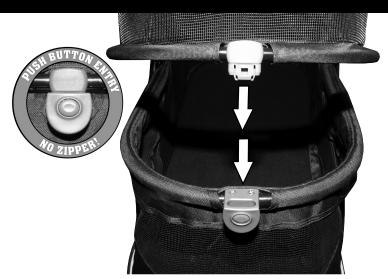

FOLDING THE STROLLER

Step 1. To open the stroller canopy, simply push and release button to unlock.



Step 2. Slide back frame lock release (F) to the right, while squeezing the front frame lock release (G) and rotate the folding mechanism almost 180 degrees forward until stroller releases and handle is lowered.



Squeeze front lock release (G.) and rotate 180 degrees forward

INSTRUCTIONS FOR USE



Apply brake lever by pushing down with toe.

Ensure brakes are applied when parking stroller.

Release by lifting brake lever with toe.

WARNING: Never leave your stroller parked without applying brakes.



LOOKING AFTER YOUR STROLLER

- Always store product in a clean, dry place.
- · Not recommended for use on the beach.
- · Do not put heavy items on top of the stroller.
- Clean frame by wiping with a lightly oiled cloth.
- Do not use detergent or abrasives. Spot clean fabric with dry cleaning fluid or mild soap and warm water.
- To ensure easy maneuverability and to minimize wear and tear, (especially wheels, axles, and swivels), keep all moving parts clean and lubricated with WD40® or light machine oil.
- · NOTE: Do not lubricate brake components or swivel locks.
- Regularly check stroller for loose parts. These should be tightened or replaced.

WHEEL MAINTENANCE

- To clean and lubricate front and rear wheels, push out locking lever under wheel housing to release rear wheel.
- To ensure ease of maneuverability and to minimize wear and tear, keep all moving parts clean and lubricated with WD40® or light machine oil.
- Push wheel sets back on until they click and lock in position; pull on wheel housings to ensure they are secure.
- · Push stroller back and forth and rotate swivels around to work in lubricant.
- Clean the rear wheel assembly and the rest of the frame with warm, soapy water; clean off with warm water and dry thoroughly.
- NOTE: Do not lubricate brake components or swivel locks.

⚠ WARNING!

FOR PETS ONLY.

Not intended to be used as a restraining device for aggressive or dangerous animals that dig, chew or paw aggressively. Do not leave your pet unattended. **PET GEAR** is not liable for any damage caused by aggressive, destructive, immature or untrained animals. Do not use near an open or exposed flame. Failure to follow these warnings and the instructions could result in serious injury or death.

- Do not carry additional bags, goods, or accessories in or on stroller except as recommended in the manufacturer's instructions.
- Recommended use of an approved safety restraint correctly fitted and adjusted.
- Do not leave pet unsupervised in stroller.
- Before making adjustments to stroller ensure that pet's body is clear of any moving parts.
- This stroller is designed for one pet only.
- Do not hang bags from handles as this may cause the product to become unstable.
- Do not use on escalator or stairs; fold stroller and carry.
- Put on brake whenever you park the stroller.
- Ensure stroller is completely erected and check that all locks are engaged before placing pet in stroller.
- Do not overload as stroller may become unstable; maximum weight of pet using this stroller not to exceed 75 lbs.
- Any goods carried in the basket not to exceed 6 lbs.

REPLACEMENT PARTS

Use only **PET GEAR** replacement parts.

Please have your model number ready before calling.

You can also request parts: http://www.petgearinc.com/main.asp?sel=2



192 Sheldon Avenue • West Rutland, VT 05777 • 877-752-9123 • www.petgearinc.com