



For The ON-THE-GO Pet™

INSTRUCTION MANUAL

ROADSTER PET STROLLER

PG8600



To see our full line of products, visit us online at: www.petgearinc.com

CUSTOMER SERVICE HELP DESK

customerservice@petgearinc.com

Toll-Free 877-752-9123 - Eastern Standard Time 8am-3pm, Monday through Friday

PARTS LIST

Check that you have all the parts shown BEFORE assembling your product.
If any parts are missing, call Customer Service.



Stroller



Axle and Brake Assembly



Front Wheel



Handle



2-Back Wheels



Removable Internal Liner

BACK WHEEL ASSEMBLY


Step 1. Slide back wheel on axle as shown in Figure A.

Step 2. Push in axle until it clicks.

Step 3. Pull on wheel to make sure the wheel is engaged.


Repeat on other side.

When finished it should look like Figure B.

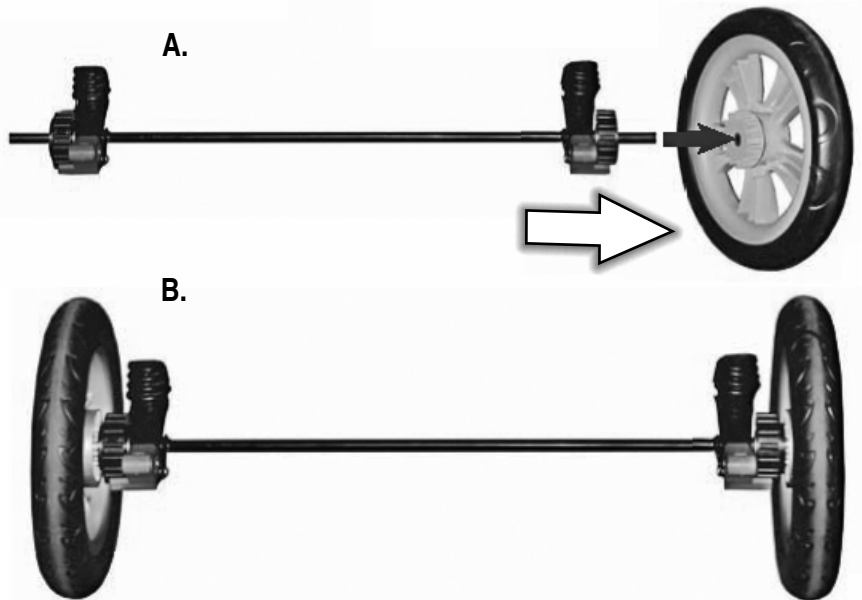


Step 4. Take rear wheels (on axle with brakes) and lock them into the 2" posts by placing leg tube over the posts and pressing down until they click (shown in Figure C).

Pull up to make sure wheels are locked.

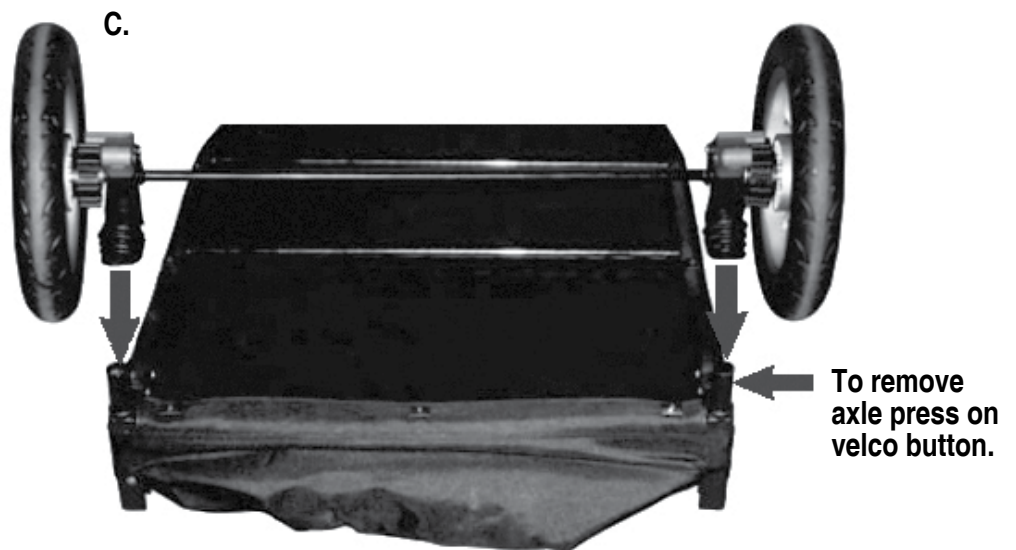


Back Wheels :
To remove wheel, push the lock/release button (Figure D) and pull wheel off.

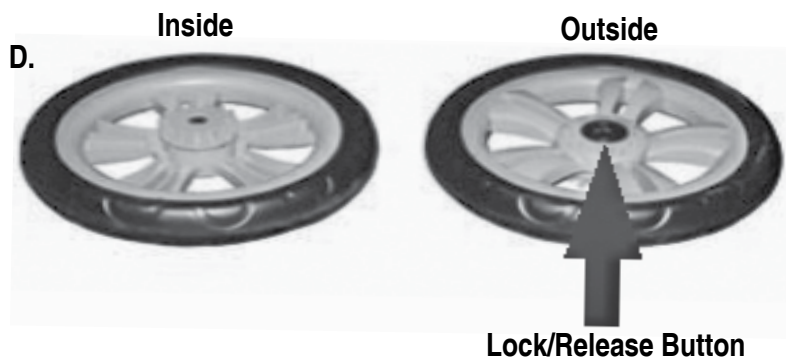


FRONT WHEEL ASSEMBLY

Step 1. To attach front wheel, slide plastic wheel support up and into tubing, Figure E.

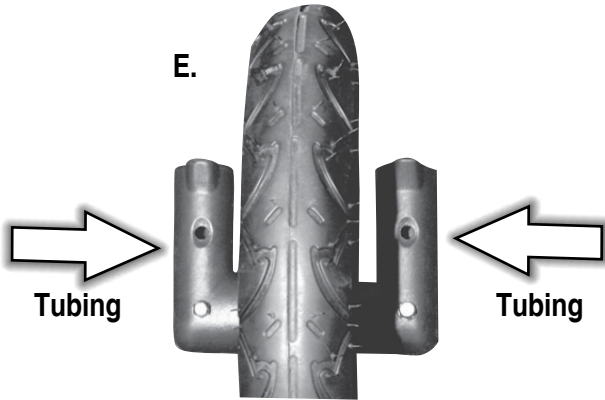

Step 2. Slide wheel up, until velco pins pop out of holes, Figure F.

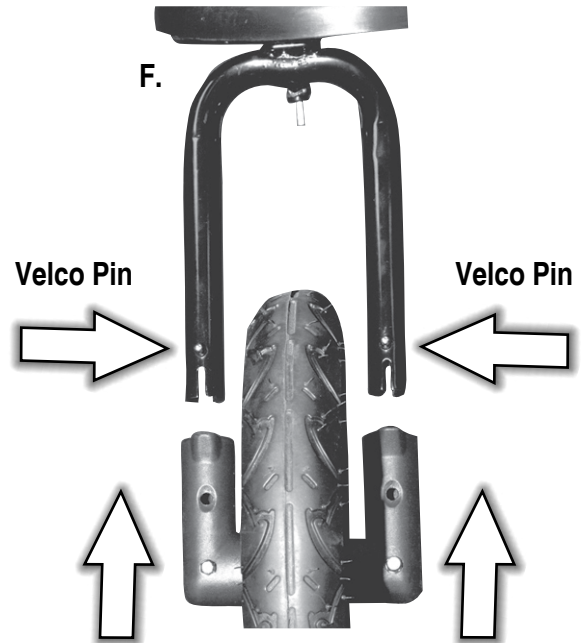

Stroller with wheels assembled.



STROLLER ASSEMBLY

THIS STROLLER HAS THREE SUPPORT BARS.

There is one on each side of the stroller—LEFT, RIGHT, and TOP SUPPORT BARS.



Step 1. After the wheels are on, stand behind the stroller, and pull up on LEFT SUPPORT BAR and to the left, to open the compartment, Figure G.



BACK OF STROLLER

STROLLER ASSEMBLY

Once you open the compartment, you will find the TOP SUPPORT BAR, Figures H. and J.

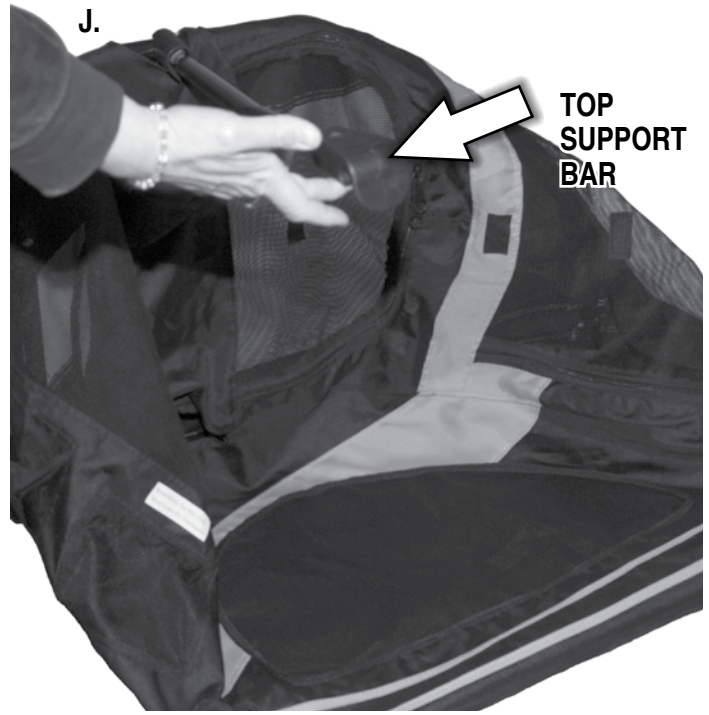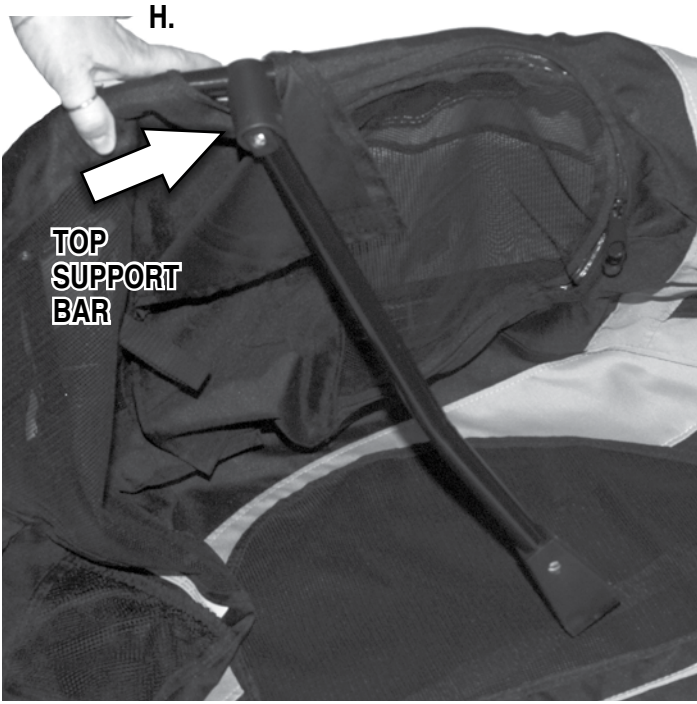


The RIGHT SUPPORT BAR is located in the interior of the compartment, Figures K. and L.



STROLLER ASSEMBLY

Step 2. Lift up on the RIGHT SUPPORT BAR, then connect the TOP SUPPORT BAR by pressing down on the TOP SUPPORT BAR, Figures M. and N.


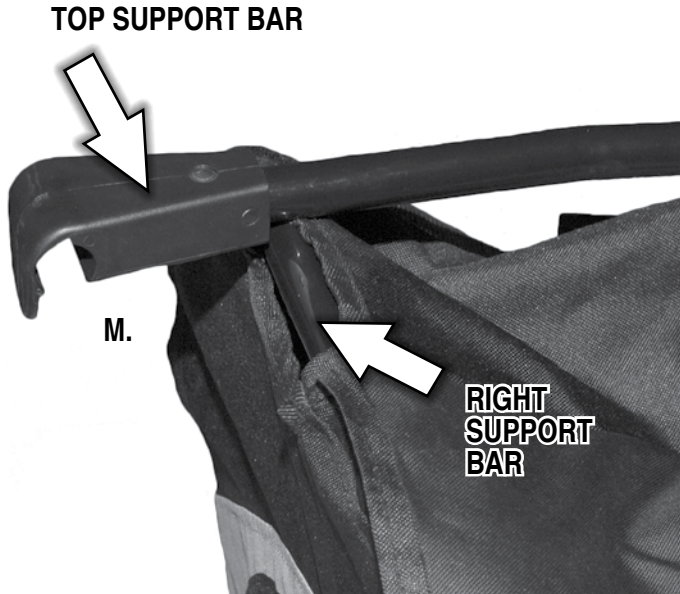


Step 3. To install the handle, place handle ends into the handle-locking mechanisms on each side of the stroller.

Choose height level (1 or 2), then release velco pins.


Then, push down until you hear a click and the velco pins pop out on each side. Figure P.

Pull up on handle to make sure it is securely locked.

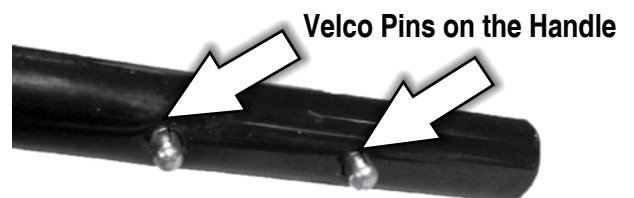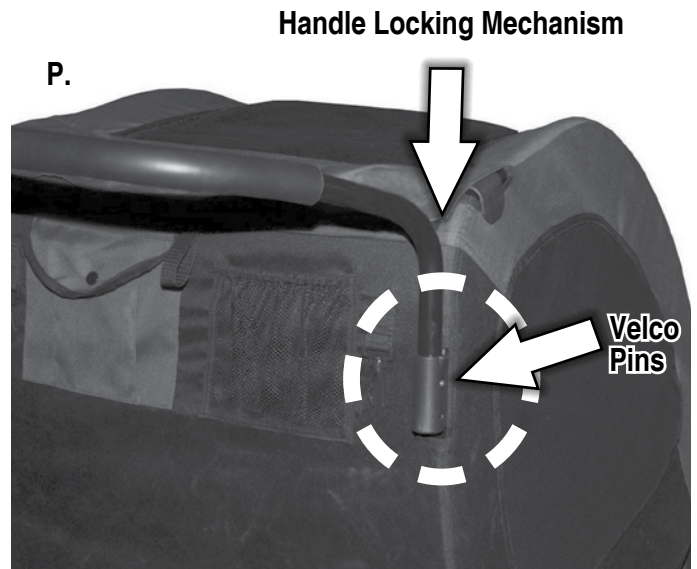


FRONT WHEEL LOCKING INSTRUCTIONS

Step 1. To use stroller in locked position for jogging, push pin in, Figure Q.

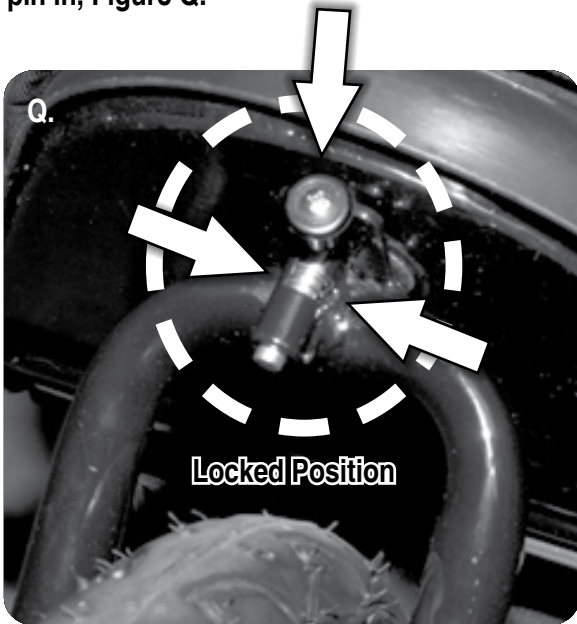


Step 2. To use stroller in swivel position, pull pin down, and to the right, Figure R.

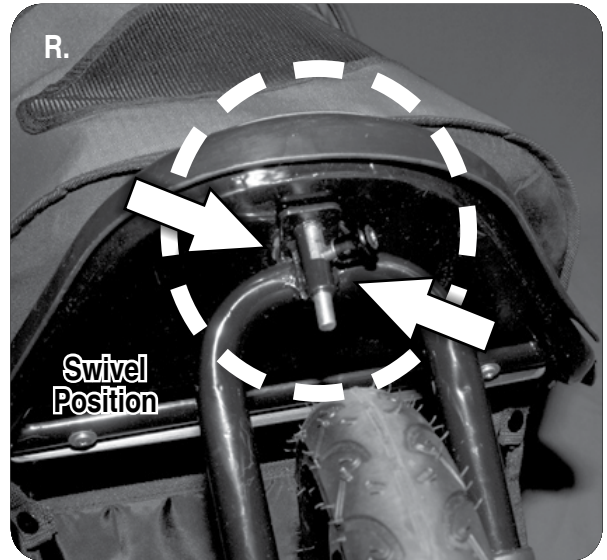

TO FOLD/PACK UP STROLLER

Step 1. Remove handle by pushing velco pins in to release. Pull handle up and off, Figure S.

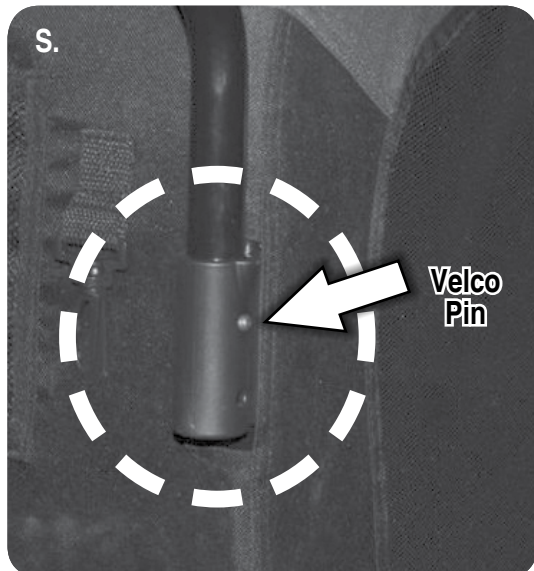

Step 2. Pull up on TOP SUPPORT BAR to release, Figure T.



TO FOLD/PACK UP STROLLER

Step 3. Fold sides inward, until flat, Figure U.



LOOKING AFTER YOUR STROLLER

- Always store product in a clean, dry place.
- Not recommended for use on the beach.
- Do not put heavy items on top of the stroller.
- Clean frame by wiping with a lightly oiled cloth.
- Do not use detergent or abrasives. Spot clean fabric with dry cleaning fluid or mild soap and warm water.
- To ensure easy maneuverability and to minimize wear and tear, (especially wheels, axles, and swivels), keep all moving parts clean and lubricated with WD40® or light machine oil.
- NOTE: Do not lubricate brake components or swivel locks.
- Regularly check stroller for loose parts. These should be tightened or replaced.

WHEEL MAINTENANCE

- To clean and lubricate front and rear wheels, push out locking lever under wheel housing to release rear wheel.
- To ensure ease of maneuverability and to minimize wear and tear, keep all moving parts clean and lubricated with WD40® or light machine oil.
- Push wheel sets back on until they click and lock in position; pull on wheel housings to ensure they are secure.
- Push stroller back and forth and rotate swivels around to work in lubricant.
- Clean the rear wheel assembly and the rest of the frame with warm, soapy water; clean off with warm water and dry thoroughly.
- NOTE: Do not lubricate brake components or swivel locks.

⚠ WARNING!

FOR PETS ONLY.

Not intended to be used as a restraining device for aggressive or dangerous animals that dig, chew or paw aggressively. Do not leave your pet unattended. **PET GEAR** is not liable for any damage caused by aggressive, destructive, immature or untrained animals. Do not use near an open or exposed flame. Failure to follow these warnings and the instructions could result in serious injury or death.

- Do not carry additional bags, goods, or accessories in or on stroller except as recommended in the manufacturer's instructions.
- Recommended use of an approved safety restraint correctly fitted and adjusted.
- Do not leave pet unsupervised in stroller.
- Before making adjustments to stroller ensure that pet's body is clear of any moving parts.
- This stroller is designed for one pet only.
- Do not hang bags from handles as this may cause the product to become unstable.
- Do not use on escalator or stairs; fold stroller and carry.
- Put on brake whenever you park the stroller.
- Ensure stroller is completely erected and check that all locks are engaged before placing pet in stroller.
- Do not overload as stroller may become unstable; maximum weight of pet using this stroller not to exceed 100 lbs.

REPLACEMENT PARTS

Use only **PET GEAR** replacement parts.

Please have your model number ready before calling.

You can also request parts: <http://www.petgearinc.com/main.asp?sel=2>



192 Sheldon Avenue • West Rutland, VT 05777 • 877-752-9123 • www.petgearinc.com