



For The ON-THE-GO Pet™

# INSTRUCTION MANUAL

## JOGGER NO-ZIP PET STROLLER

PG8400NZ/PG8450NV



To see our full line of products, visit us online at: [www.petgearinc.com](http://www.petgearinc.com)

### CUSTOMER SERVICE HELP DESK

[customerservice@petgearinc.com](mailto:customerservice@petgearinc.com)


Toll-Free 877-752-9123 - Eastern Standard Time 8am-3pm, Monday through Friday

## PARTS LIST


Check that you have all the parts shown BEFORE assembling your product.  
If any parts are missing, call Customer Service.





Axle

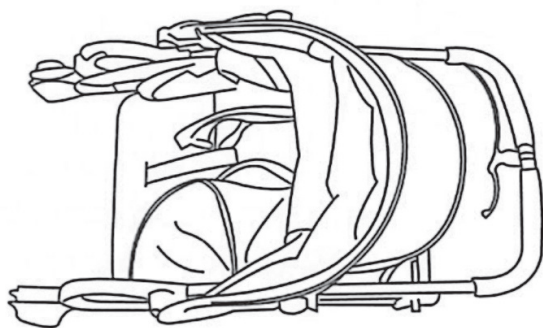

Stroller

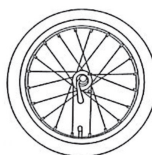


Front Wheel

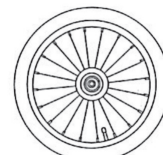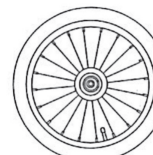

2-Back Wheels



Removable  
Waterproof Liner

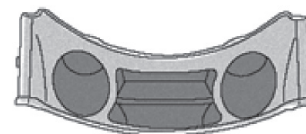


Back Tray

## UNFOLDING THE STROLLER

Step 1. Release folding latch (A).

Step 2. Spread handle (B) and seat apart until the frame clicks and locks on both sides.

Step 3. Ensure that the stroller is locked in on both sides before using.

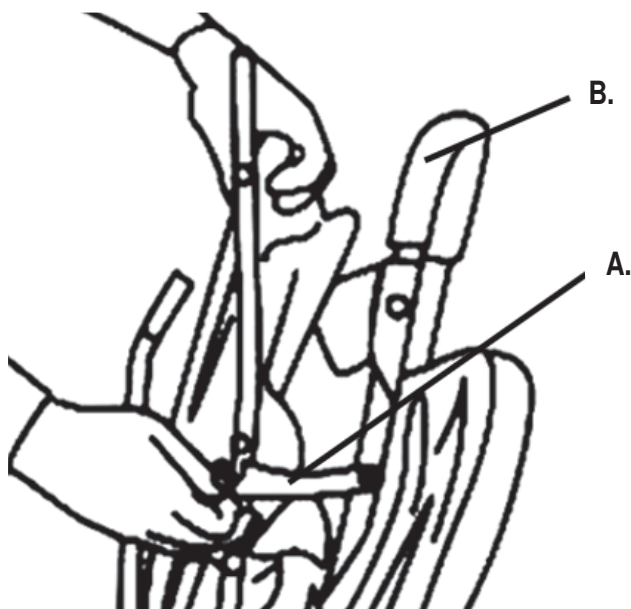

## BACK WHEEL ASSEMBLY INSTRUCTIONS


To connect or release wheels from axle, push button in.



## BACK WHEEL ASSEMBLY INSTRUCTIONS

Push back wheels until they easily click into place.

Shown with both back wheels in place.

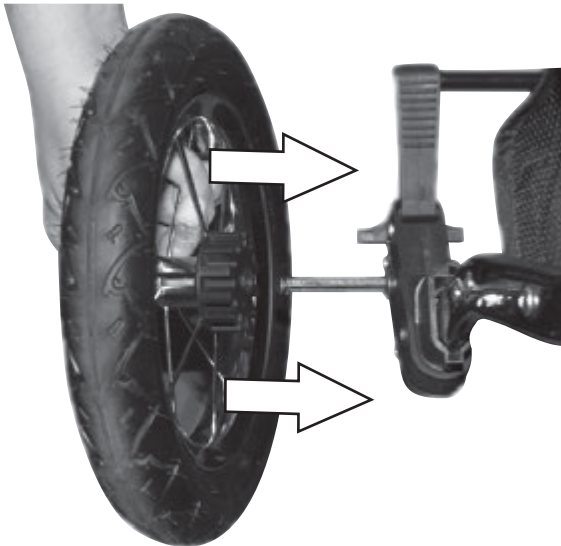

# FRONT WHEEL ASSEMBLY INSTRUCTIONS

**Step 1.** To assemble front wheel, first make sure the dial on the front wheel plate is set to "O"




**Step 2.** Push down on the button in the center of the dial while inserting wheel. (Button must also be pushed down to remove wheel).



**Step 3.** Turn wheel knob clockwise to lock.



**Step 4.** Turn wheel knob counter clockwise to swivel.

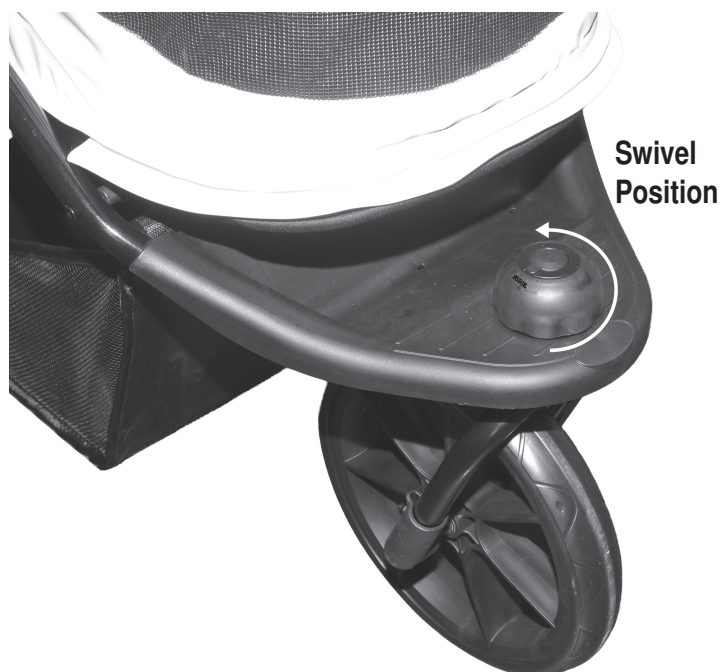

## OPENING THE STROLLER

Spread the canopy apart to the open position.



Apply brake lever by pushing down with toe.

Ensure brakes are applied when parking stroller.

Release by lifting brake lever with toe.

**WARNING:** Never leave your stroller parked without applying brakes.

Back View of Stroller



## TO SECURE COMPARTMENT TO FRAME

Step 1. Open stroller and pull compartment down.




Step 2.  
To help secure compartment, Velcro flap around tube and fasten to the bottom of the compartment.



## TO SECURE PUSH BUTTON LATCH

Step 1. To close compartment, pull canopy downward and push top portion of latch down into lower portion until it locks in place.

Step 2. To open the stroller canopy, simply push and release button to unlock.

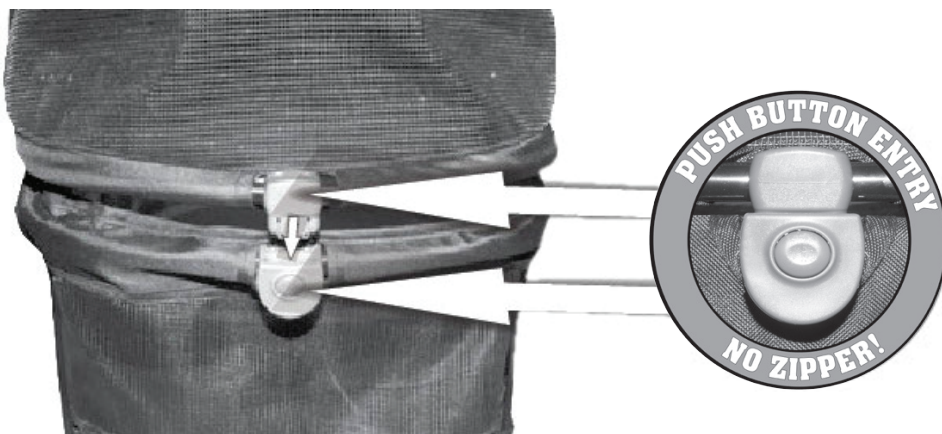


## OPTIONAL USE FOR OPEN CANOPY

Loop elastic strap around top part of latch to secure canopy upright.



## FOLDING THE STROLLER

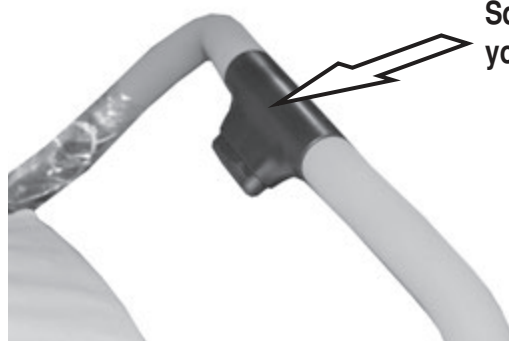

Squeeze handle to begin collapsing your stroller.

Gently fold stroller forward out and away to easily collapse.



Secure latch for easy carrying transport.

## TO ASSEMBLE BACK TRAY

Step 1. To assemble the back tray, first align a hole on one side of the tray with one of the bolts on the handle of the same side of the stroller.

Step 2. Snap one side of the tray over the bolt on the handle then repeat for the other side.



## LOOKING AFTER YOUR STROLLER

- Always store product in a clean, dry place.
- Not recommended for use on the beach.
- Do not put heavy items on top of the stroller.
- Clean frame by wiping with a lightly oiled cloth.
- Do not use detergent or abrasives. Spot clean fabric with dry cleaning fluid or mild soap and warm water.
- To ensure easy maneuverability and to minimize wear and tear, (especially wheels, axles, and swivels), keep all moving parts clean and lubricated with WD40® or light machine oil.
- NOTE: Do not lubricate brake components or swivel locks.
- Regularly check stroller for loose parts. These should be tightened or replaced.

## WHEEL MAINTENANCE

- To clean and lubricate front and rear wheels, push out locking lever under wheel housing to release rear wheel.
- To ensure ease of maneuverability and to minimize wear and tear, keep all moving parts clean and lubricated with WD40® or light machine oil.
- Push wheel sets back on until they click and lock in position; pull on wheel housings to ensure they are secure.
- Push stroller back and forth and rotate swivels around to work in lubricant.
- Clean the rear wheel assembly and the rest of the frame with warm, soapy water; clean off with warm water and dry thoroughly.
- NOTE: Do not lubricate brake components or swivel locks.

## **WARNING!**

 **WARNING:** Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

### FOR PETS ONLY.

Not intended to be used as a restraining device for aggressive or dangerous animals that dig, chew or paw aggressively. Do not leave your pet unattended. **PET GEAR** is not liable for any damage caused by aggressive, destructive, immature or untrained animals. Do not use near an open or exposed flame. Failure to follow these warnings and the instructions could result in serious injury or death.

- Do not carry additional bags, goods, or accessories in or on stroller except as recommended in the manufacturer's instructions.

Recommended use of an approved safety restraint correctly fitted and adjusted.

- Do not leave pet unsupervised in stroller.
- Before making adjustments to stroller ensure that pet's body is clear of any moving parts.
- This stroller is designed for one pet only.
- Do not hang bags from handles as this may cause the product to become unstable.
- Do not use on escalator or stairs; fold stroller and carry.
- Put on brake whenever you park the stroller.
- Ensure stroller is completely erected and check that all locks are engaged before placing pet in stroller.
- Do not overload as stroller may become unstable; maximum weight of pet using this stroller not to exceed 90 lbs.
- Any goods carried in the basket not to exceed 6 lbs.

## **REPLACEMENT PARTS**

Use only **PET GEAR** replacement parts.  
Please have your model number ready before calling.



192 Sheldon Avenue • West Rutland, VT 05777 • 877-752-9123 • [www.petgearinc.com](http://www.petgearinc.com)